




Collaboration Touch Panel

CTP18

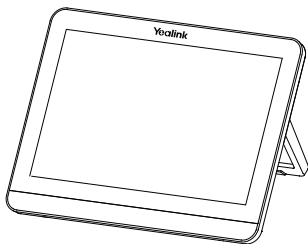

English | 简体中文 | Deutsch | Español | Français

Quick Start Guide (V1.3)

Table of Contents

English	1
简体中文	5
Deutsch	9
Español.....	13
Français.....	17

Package Contents



CTP18

(7.5m, 24.61ft)
CAT5e UTP (RJ45 - RJ45) CableQuick
Start Guide(WH-85*3.0mm)
Screwdriver

Mounting Bracket



× 2

φ6 * 30 mm, white, Polyamide



× 2

4*30 FAHOZN3+ (+)



× 2

2*6KMOZN3+



Cable Lock Box

(W25.4*L50mm,3M)
Velcro

Cable Lock Box



PoE Injector

(3m, 9.84ft)
CAT5e FTP
(RJ45 - RJ45) Cable(1.8m, 5.91ft)
Power Cord
(100-240 V)

PoE Adapter (Optional)




We recommend that you use the accessories provided or approved by Yealink.
The use of unapproved third-party accessories may result in reduced performance.


CTP18 Connection

• Assemble your CTP18


①

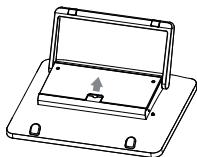


②

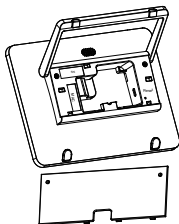

③

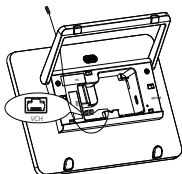


④

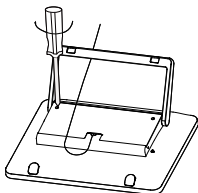

• Connect your CTP18 with the endpoint

Method 1. Connect the CTP18 with endpoint directly

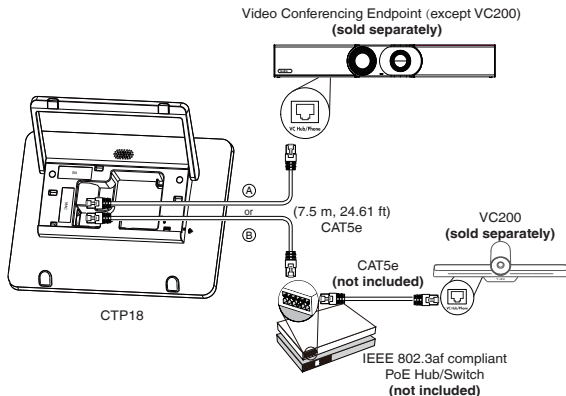


Not included accessories requirements:

- » Ethernet cable: CAT5e or higher ethernet cable.
- » PoE switch: IEEE 802.3af compliant PoE Hub/Switch.

Method 2. Connect the CTP18 with the endpoint by Wired LAN

① Connect the CTP18 to PoE Adapter

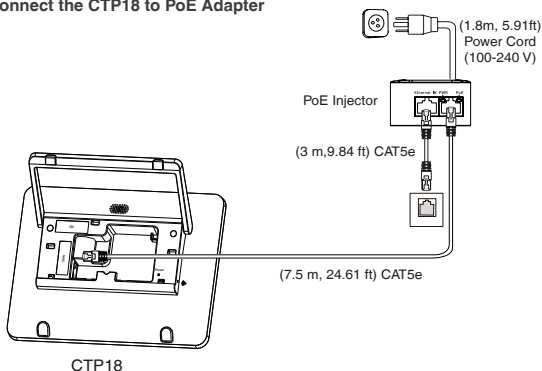

② Pair the CTP18 with endpoint

- For VCS/MeetingEye endpoints:

Enter the endpoint IP address and PIN code according to the on-screen prompts in the CTP18, then the system will be automatically paired with the CTP18.


Note: If the system has a YMS or other account logged in, the IP address show in the more settings; if not, the IP address show in the monitor idle screen.

- For MeetingBar endpoints running in Teams version:

Sign into the same Microsoft account on both CTP18 and the endpoint, then enter the PIN code according to the on-screen prompts, after that the system will be automatically paired with the CTP18.

- For MeetingBar endpoints running in Zoom version:


Enter the IP Address(which you can obtain on the endpoint interface), then the system will be automatically paired with the CTP18.

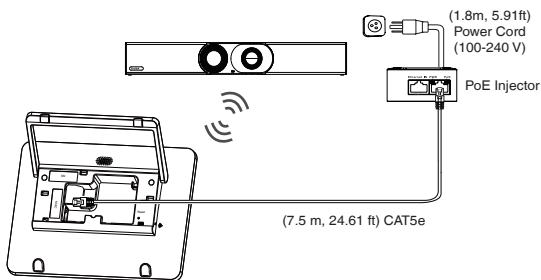

CTP18 Installation


● Put on a table

 You can adjust the touch screen as you need.




● Mount on a wall

Expansion screws:
 $\phi 6 \times 30\text{mm}$

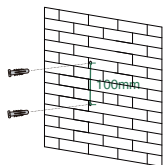


①

Screws:
4*30 FAHOZN3+ (+)

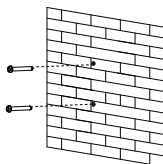


②


Screws:
2*6KMOZN3+

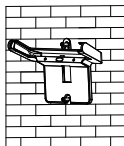


③

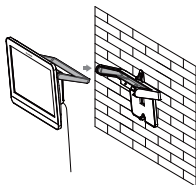

④

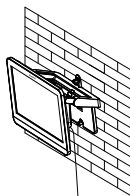

⑤

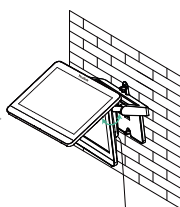

⑥

包装清单



CTP18

(7.5m, 24.61ft)
CAT5e UTP (RJ45 - RJ45) 线

快速入门指南

(WH-85*3.0mm)
螺丝刀

挂墙架



φ6 * 30 mm, 白色, 聚酰胺



4*30 FAHOZN3+ (+)



2*6KMOZN3+



USB锁线盒

(W25.4*L50mm,3M)
魔术贴

USB锁线盒



PoE供电器

(3m, 9.84ft)
CAT5e FTP
(RJ45 - RJ45) 线(1.8m, 5.91ft)
电源线 (100-240 V)


PoE 电源 (可选)

- 我们推荐使用由Yealink提供或经Yealink认可的配件和线缆, 使用未经认可的第三方配件和线缆可能会导致性能的下降。
- 产品采用POE供电方式, 需确保供电网线不经过室外, 以避免设备遭受风险。


CTP18 连线

● CTP18 组装


①

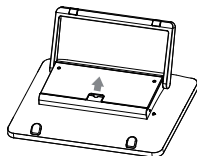


②

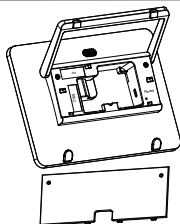

③

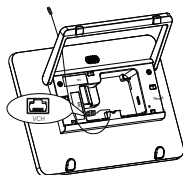


④

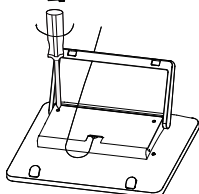

● CTP18与终端连接

方式1. CTP18与会议电视终端有线直连

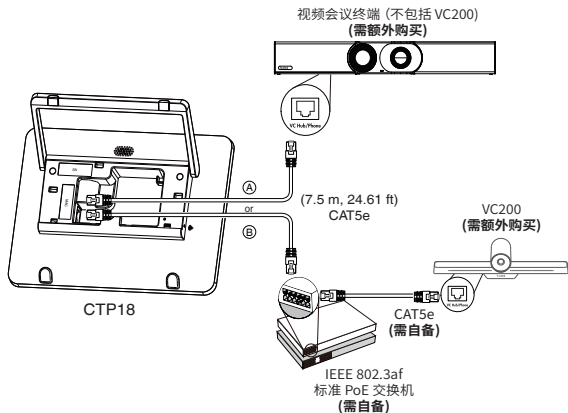


需自备配件要求:

- » 以太网线: CAT5e及以上规格网线。
- » PoE交换机: IEEE 802.3af 标准 PoE 交换机。

方式2. CTP18与会议电视终端有线局域网配对连接

① CTP18连接PoE电源

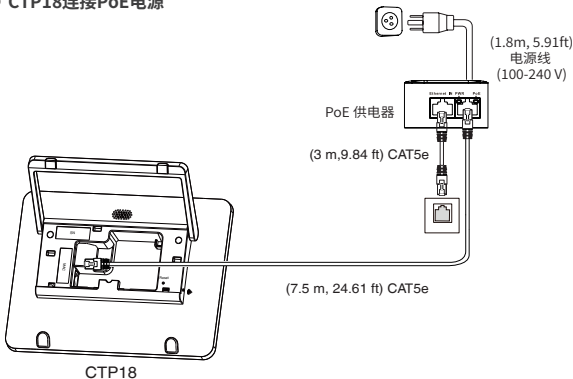

② CTP18与终端配对

-对于VCS二代终端/MeetingEye系列终端：

根据CTP18页面提示内容输入终端IP与配对码后，系统将自动与终端进行配对。

说明：未登录服务平台或账号时终端IP地址显示在终端空闲界面，若登录服务平台或账号在终端上点击更多查看。

-对于Teams版本的MeetingBar系列终端：

终端和CTP18先登录相同的微软账号，再根据终端显示器的界面提示内容，在CTP18上输入相应配对码后，系统将自动与终端进行配对。

-对于Zoom版本的MeetingBar系列终端：

在CTP18的登录界面，输入终端的IP地址(在终端初始界面查看)，系统将自动与终端进行配对。

CTP18 安装

● 置于桌面

CTP18可以调节至需要的角度。




● 墙装


膨胀螺丝：
 $\phi 6 \times 30\text{mm}$

螺丝：
4*30 FAHOZN3+ (+)


螺丝：
2*6KMOZN3+

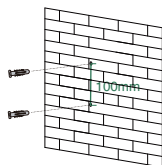


①

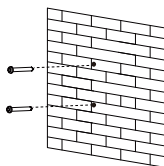


②

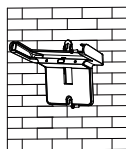


③

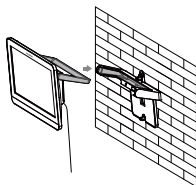

④

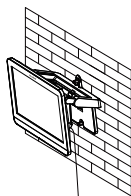

⑤

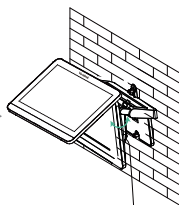

⑥

Lieferumfang



CTP18



(7.5m, 24.61ft)
CAT5e-Kabel UTP (RJ45 - RJ45)



Kurzanleitung



(WH-85*3.0mm)
Schraubendreher



halterung



φ6 * 30 mm, weiß, Polyamid



4*30 FAHOZN3+ (+)



2*6KMOZN3+



Kabelschloss



(W25.4*L50mm,3M)
Klettverschluss

Kabelschloss



PoE-Injektor



(3m, 9.84ft)
CAT5e-Kabel FTP
(RJ45 - RJ45)



(1.8m, 5.91ft)
Netzkabel
(100-240 V)


PoE-Netzteil (Optional)

💡 Wir empfehlen Ihnen, nur durch Yealink bereitgestellte oder zugelassene Zubehörteile zu verwenden. Die Verwendung von nicht zugelassenem Drittanbieter-Zubehör kann zu verminderter Leistungsfähigkeit führen.


CTP18-Verbindung

• Bauen Sie Ihr CTP18 zusammen


1

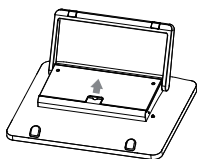


2

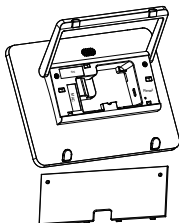

3

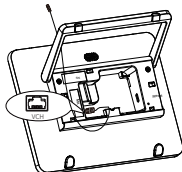


4

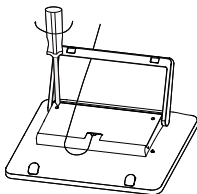

• Verbinden Sie Ihr CTP18 mit dem Endpunkt

Methode 1. Das CTP18 direkt mit dem Endpunkt verbinden

Videokonferenz-Endpoint (außer VC200)
(separat erhältlich)

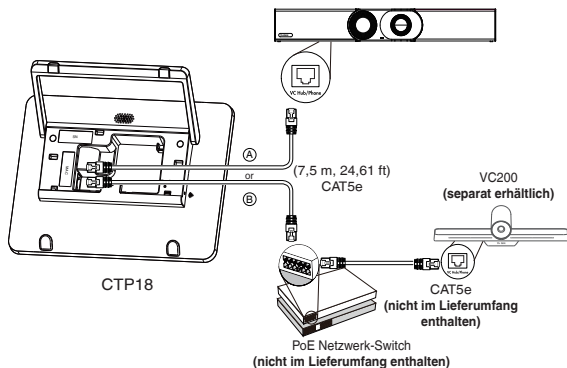


Nicht im Lieferumfang enthalten sind:

» Ethernet-Kabel: CAT5e oder höher.

» PoE-Switch: PoE Netzwerk-Switch.

Methode 2. Verbinden Sie das CTP18 über ein verkabeltes LAN mit dem Endpunkt

① Das CTP18 mit dem PoE-Netzteil verbinden

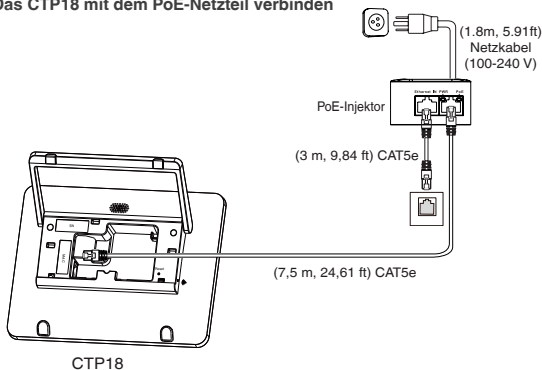

② Das CTP18 mit dem Endpunkt koppeln

- Für VCS/MeetingEye-Endpunkte:

Geben Sie die IP-Adresse und den PIN-Code des Endpunkts entsprechend den Bildschirmangaben im CTP18 ein, dann wird das System automatisch mit dem CTP18 gekoppelt.


Hinweis: Wenn das System über ein YMS oder ein anderes angemeldetes Konto verfügt, wird die IP-Adresse in den weiteren Einstellungen **angezeigt**; wenn nicht, wird die IP-Adresse auf dem Bildschirm im Ruhezustand angezeigt.

- Für MeetingBar-Endpunkte, die in der Teams-Version laufen:

Melden Sie sich dann sowohl auf CTP18 als auch auf dem Endpunkt bei demselben Microsoft-Konto an. Geben Sie den PIN-Code gemäß den Eingabeaufforderungen auf dem Bildschirm ein, danach das System wird automatisch mit dem CTP18 gekoppelt.

- Für MeetingBar-Endpunkte, die in der Zoom-Version ausgeführt werden:

Geben Sie die IP-Adresse ein (die Sie über die Endpunkt-Schnittstelle erhalten können), dann wird das System automatisch mit dem CTP18 gekoppelt.

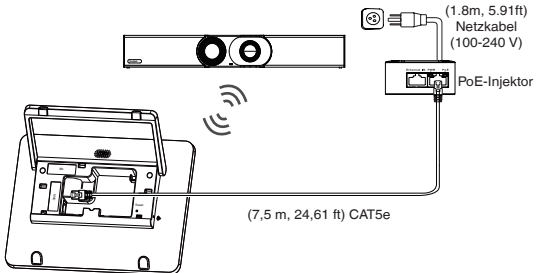

CTP18-Installation

● Auf einen Tisch stellen

Sie können den Touchscreen nach Bedarf einstellen.




● Wandmontage


Expansionsschraube:
 $\phi 6 \times 30\text{mm}$

Schraube:
4*30 FAHOZN3+ (+)


Schraube:
2*6KMOZN3+

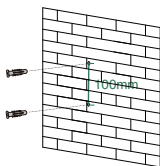


1

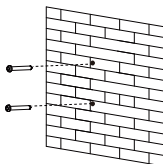


2

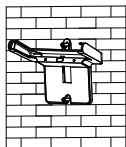


3

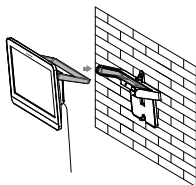

4

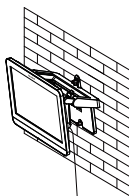

5

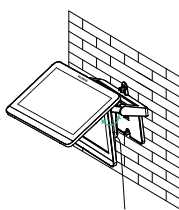

6

Contenido del embalaje



CTP18



(7,5m, 24,61ft)
Cable Cat5e UTP (RJ45 - RJ45)



Guía de inicio rápido



(WH-85*3.0mm)
Destornillador



Soporte de montaje $\phi 6 \times 30$ mm, blanco, poliamida



x 2



x 2

4*30 FAHOZN3+ (+)



x 2

2*6KMOZN3+



Caja de bloqueo de cable (W25.4*L50mm,3M)
Velcro



Caja de bloqueo de cable



inyector PoE



(3m, 9,84ft)
Cable Cat5e FTP (RJ45 - RJ45)



(1,8m, 5,91ft)
Cable de alimentación (100-240 V)

PoE Adapter (Optional)




Utilice siempre accesorios proporcionados o aprobados por Yealink. El uso de accesorios no homologados puede causar un mal funcionamiento del equipo.


Conexión CTP18

• Instale su CTP18


1

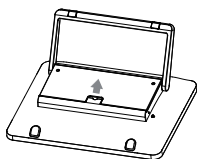


2

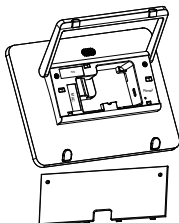

3

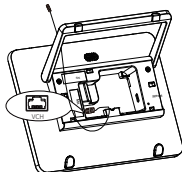


4

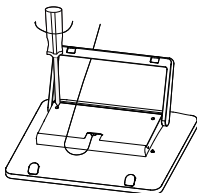

● Conecte su CTP18 con el Endpoint

Método 1. Conecte el CTP18 con el Endpoint

Terminal de videoconferencia (excepto VC200)
(se vende por separado)

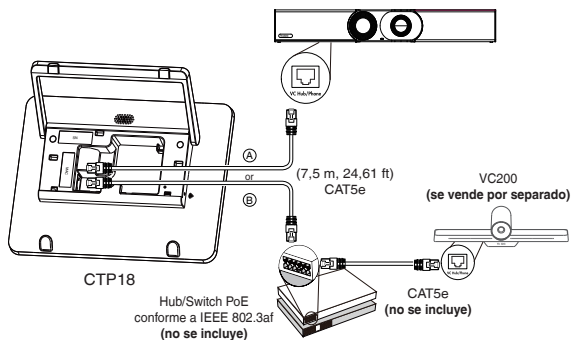


Accesorios necesarios no incluidos:

- » Cable Ethernet: cable Ethernet CAT5e o superior.
- » PoE-Switch: Hub/Switch PoE conforme a IEEE 802.3af.

Método 2. Conecte el CTP18 con el Endpoint mediante LAN cableada

❶ Conecte el CTP18 al adaptador PoE

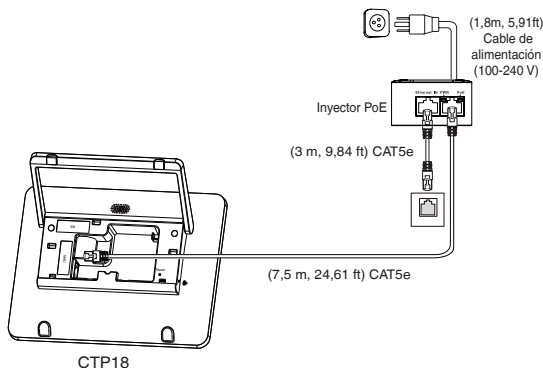

2 Empareje el CTP18 con el Endpoint

- Para terminales VCS / MeetingEye:

Ingresa la dirección IP del Endpoint y el código PIN de acuerdo con las indicaciones en pantalla en la CTP18, luego el sistema se emparejará automáticamente con la CTP18.

Nota: Si el sistema tiene un YMS u otra cuenta iniciada, la dirección IP se muestra en **más** configuraciones; si no, la dirección IP se muestra en la pantalla inactiva del monitor.


- Para los equipos MeetingBar que se ejecutan en la versión de Teams:

Inicie sesión en la misma cuenta de Microsoft tanto en CTP18 como en el endpoint, luego ingrese el código PIN de acuerdo con las indicaciones en pantalla, después de que el sistema se emparejará automáticamente con el CTP18.

- Para equipos MeetingBar que se ejecutan en la versión Zoom:

Enter the IP Address(which you can obtain on the endpoint interface), then the system will be automatically paired with the CTP18.

Método 3. Conecte la CTP18 con el Endpoint de forma inalámbrica

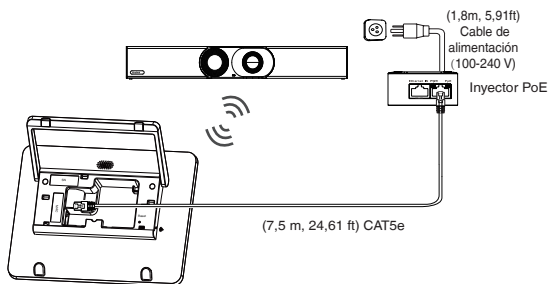

Instalación de CTP18

● En una mesa

Puede ajustar la pantalla táctil según sus necesidades.




● Montaje en pared

Tornillo de expansión:
 $\phi 6 \times 30\text{mm}$

Tornillos:
4*30 FAHOZN3+ (+)

Tornillos:
2*6KMOZN3+

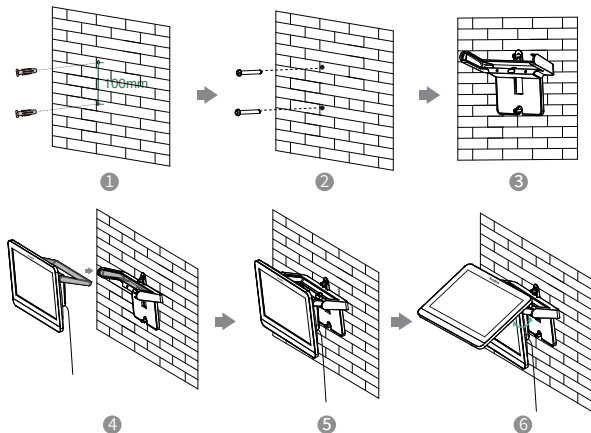

Contenu de l'emballage



CTP18



(7,5m, 24,61ft)
Cable Cat5e UTP (RJ45 - RJ45)



Guide de démarrage rapide



(WH-85*3.0mm)
Tournevis



Support de fixation $\phi 6 \times 30$ mm, blanc, polyamide



× 2



× 2



× 2

4*30 FAHOZN3+ (+)

2*6KMOZN3+



Boîte de verrouillage (W25.4*L50mm,3M)
de câble Velcro



Injecteur PoE



(3m, 9,84ft)
Cable Cat5e FTP
(RJ45 - RJ45)



(1,8m, 5,91ft)
Cordon d'alimentation
(100-240 V)

Boîte de verrouillage de câble

Adaptateur Ethernet (en option)




Nous vous recommandons d'utiliser uniquement des accessoires fournis ou approuvés par Yealink. L'utilisation d'accessoires tiers est susceptible de réduire les performances de l'appareil.


Connexion CTP18

● Montez votre CTP18


①

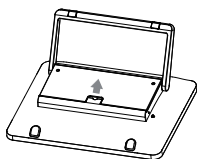


②

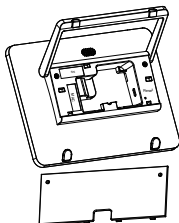

③

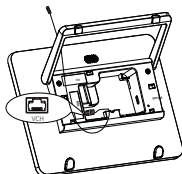


④

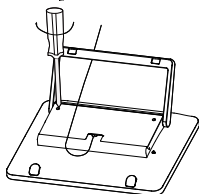

● Branchez votre CTP18 avec le point de terminaison

Méthode 1. Branchez le CTP18 directement avec le point de terminaison

Point de terminaison de visioconférence (sauf VC200)
(vendu séparément)

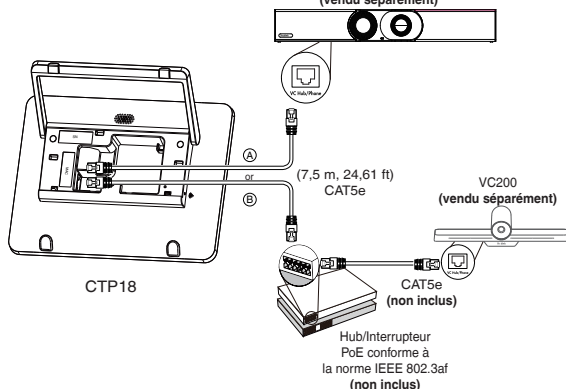


Accessoires nécessaires non fournis :

- » Câble Ethernet: Câble Ethernet de type CAT5e ou supérieur.
- » PoE-Switch: Hub/Interrupteur PoE conforme à la norme IEEE 802.3af.

Méthode 2. Branchez le CTP18 avec le point de terminaison par LAN filaire

① Connectez le CTP18 à l'adaptateur Ethernet

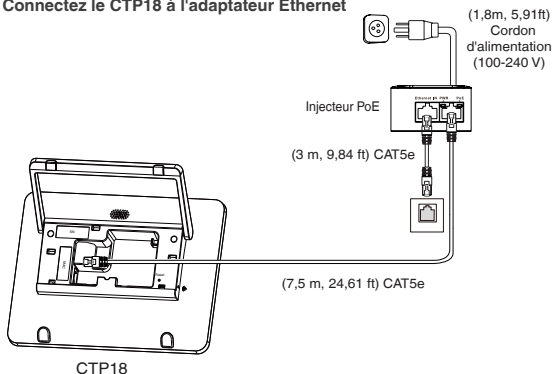

2 Associez le CTP18 avec le point de terminaison

- Pour les points de terminaison VCS/MeetingEye :

Entrez l'adresse IP du point de terminaison et le code PIN en suivant les invites à l'écran dans le CTP18. Le système exécute alors automatiquement l'appariement du CTP18.

Remarque : si le système dispose d'un YMS ou d'un autre compte connecté, l'adresse IP est affichée dans les paramètres supplémentaires. Sinon, l'adresse IP s'affiche sur l'écran de veille du moniteur.


- Pour les points de terminaison MeetingBar dans la version Teams :

Connectez-vous au même compte Microsoft sur CTP18 et le point de terminaison, puis entrez le code PIN conformément aux invites à l'écran, après quoi le système sera automatiquement couplé avec le CTP18.

- Pour les points de terminaison MeetingBar dans la version Zoom :

Entrez l'adresse IP (que vous pouvez obtenir sur l'interface du point de terminaison), le système exécutera alors automatiquement l'appariement avec le CTP18.

Méthode 3. Branchez le CTP18 avec le point de terminaison sans fil

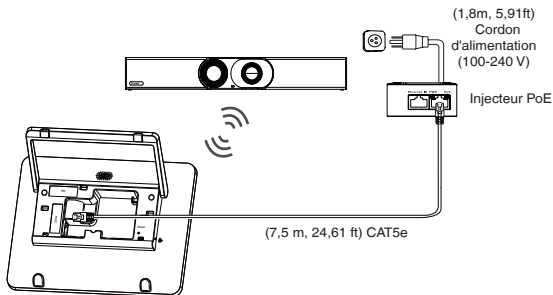

Installation du CTP18

● Installation sur une table

Vous pouvez ajuster l'écran tactile selon vos besoins.




● Montage mural

Vis d'expansion:
 $\phi 6 \times 30\text{mm}$

Vis:
4*30 FAHOZN3+ (+)

Vis:
2*6KMOZN3+

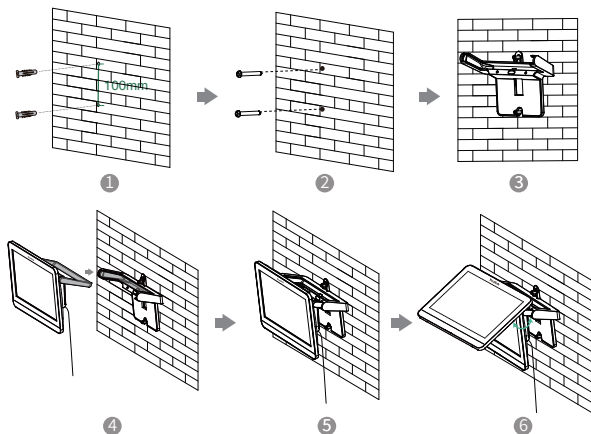



Declaration of Conformity

We,

YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD

Address: No.666 Hu'an Rd. Huli District Xiamen City, Fujian, P.R. China

Manufacturer: YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD

Address: No.666 Hu'an Rd. Huli District Xiamen City, Fujian, P.R. China

DATE: 20th /July/2019

declare that the product

Type: Collaboration Touch Panel

Model: CTP18

meets the essential requirements and other relevant provisions according to the following EC directive

Directive: 2014/30/EU, 2014/35/EU, RED 2014/53/EU

Conformity

The product complies with the following standards:

Safety : **EN IEC 62368-1:2020+A11:2020**

EMC: **EN 55032:2015+AC:2016**

EN 55035:2017

Radio: ETSI EN 301 489-1 V2.2.3,

ETSI EN 301 489-3 V2.1.1,

ETSI EN 301 489-17 V3.2.4,

ETSI EN 300 328 V2.2.2;

ETSI EN 301 893 V2.1.1

ETSI EN 300 440 V2.2.1

Health :EN IEC 62311:2020

Harmonized: UN-EN62321

Directive 2011/65/EU and (EU)2015/863 of the European Parliament and of the Council of 8 June 2011 and 4 June 2015 on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS 2.0)

Directive 2012/19/EU of the European Parliament and of the Council of 4 July 2012 on Waste electrical and electronic equipment (WEEE)

Regulation (EC) No.1907/2006 of the European Parliament and of the Council of 18 December 2006 on Registration, Evaluation, Authorization, and Restriction of Chemicals (REACH)

The declaration of conformity is issued under the sole responsibility of the manufacturer

NAME: Huahu Wang

DATE:

TITLE: Manager



Huahu Wang
20 Jul / 2019

Operating Ambient Temperatures

- Operating temperature: -33 to 104°F (0 to 40°C)
- Relative humidity: 5% to 90%, noncondensing
- Storage temperature: -22 to +158°F (-30 to +70°C)

Warranty

Our product warranty is limited only to the unit itself, when used normally in accordance with the operating instructions and the system environment. We are not liable for damage or loss resulting from the use of this product, or for any claim from a third party. We are not liable for problems with Yealink devices arising from the use of this product; we are not liable for financial damages, lost profits, claims from third parties, etc., arising from the use of this product.

Explanation of the symbols

- DC symbol
is the DC voltage symbol.
- WEEE Warning symbol

To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, and users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

Restriction of Hazardous Substances Directive (RoHS)

This device complies with the requirements of the EU RoHS Directive. Statements of compliance can be obtained by contacting support@yealink.com.

Safety Instructions

Save these instructions. Read these safety instructions before use!

General Requirements

- Before you install and use the device, read the safety instructions carefully and observe the situation during operation.
- During the process of storage, transportation, and operation, please always keep the device dry and clean, avoid collision and crash.
- Please attempt not to dismantle the device by yourself. In case of any discrepancy, please contact the appointed maintenance center for repair.
- Please refer to the relevant laws and statutes while using the device. Legal rights of others should be respected as well.

Environmental Requirements

- Place the device at a well-ventilated place. Do not expose the device under direct sunlight.
- Keep the device dry and free of dusts.
- Do not place the device on or near any inflammable or fire-vulnerable object, such as rubber-made materials.
- Keep the device away from any heat source or bare fire, such as a candle or an electric heater.

Operating Requirements

- Do not let a child operate the device without guidance.
- Do not let a child play with the device or any accessory in case of accidental swallowing.
- Please use the accessories provided or authorized by the manufacturer only.
- The power supply of the device shall meet the requirements of the input voltage of the device. Please use the provided surge protection power socket only.
- Before plugging or unplugging any cable, make sure that your hands are completely dry.
- Do not spill liquid of any kind on the product or use the equipment near water, for example, near a bathtub, washbowl, kitchen sink, wet basement or near a swimming pool.
- During a thunderstorm, stop using the device and disconnect it from the power supply. Unplug the power plug and the Asymmetric Digital Subscriber Line (ADSL) twisted pair (the radio frequency cable) to avoid lightning strike.
- If the device is left unused for a rather long time, disconnect it from the power supply and unplug the power plug.
- When there is smoke emitted from the device, or some abnormal noise or smell, disconnect the device from the power supply, and unplug the power plug immediately.
- Contact the specified maintenance center for repair.
- Do not insert any object into equipment slots that is not part of the product or auxiliary product.
- Before connecting a cable, connect the grounding cable of the device first. Do not disconnect the grounding cable until you disconnect all other cables.

Cleaning Requirements

- Before cleaning the device, disconnect it from the power supply.
- Use a piece of soft, dry and anti-static cloth to clean the device.
- Keep the power plug clean and dry.

Troubleshooting

The unit cannot supply power to device other than Yealink device.

There is a bad connection with the plug.

1. Clean the plug with a dry cloth.

2. Connect it to another wall outlet.

The usage environment is out of operating temperature range.

1. Use in the operating temperature range.

The cable between the unit and the Yealink device is connected incorrectly.

About Yealink

Yealink (Stock Code: 300628) is a global-leading provider of Unified Communication & Collaboration Solutions specialized in video conferencing, voice communications, and collaboration, dedicated to helping every person and organization embrace the power of "Easy Collaboration, High Productivity".

With best-in-class quality, innovative technology, and user-friendly experiences, Yealink is one of the best providers in more than 140 countries and regions, ranks No.1 in the global market share of IP Phone, and is the Top 5 leader in the video conferencing market (Frost & Sullivan, 2021).

For more information about Yealink, click here.

Technical Support

Visit Yealink Wiki (<http://support.yealink.com/>) for firmware downloads, product documents, FAQ, and more. For better service, we sincerely recommend you to use Yealink Ticketing system (<https://ticket.yealink.com/>) to submit all your technical issues.

1. Connect the cable correctly.

You cannot connect the cable properly.

1. You may have connected a wrong Yealink device.

2. Use the correct power supply.

Some dust, etc., may be in the port.

1. Clean the port.

Contact your dealer or authorized service facility for any further questions.

FCC CAUTION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

ISED WARNING

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. Les communications effectuées au moyen de cet appareil ne sont pas nécessairement protégées des interférences.

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The equipment should be installed and operated with minimum distance 20cm between the radiator and your body. Déclaration d'exposition aux radiations: Cet équipement est conforme aux limites d'exposition aux rayonnements ISED Canada établies pour un environnement non contrôlé.

Cet équipement doit être installé et utilisé avec un minimum de 20cm de distance entre la source de rayonnement et votre corps. The device for operation in the band 5 150-5 250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

Les dispositifs fonctionnant dans la bande 5 150-5 250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux.

EU Regulatory Information

Support Frequency Bands and Power:

WLAN 2.4 GHz < 20 dBm

WLAN 5150-5250 MHz < 23 dBm

WLAN 5250-5350 MHz < 20 dBm

(1) WLAN 5470-5725 MHz < 27 dBm

WLAN 5745-5825 MHz < 14 dBm



AT	BE	CY	CZ	DK	EE	FI
FR	DE	EL	HU	IE	IT	LV
LI	LU	MT	NL	PL	PT	SK
SI	ES	SE	UK	BG	RO	HR

In all EU member states, operation of 5150-5250 MHz is restricted to indoor use only.

Contact Information

YEALINK NETWORK TECHNOLOGY CO.,LTD.

No.666 Hu'an Rd,Huli District Xiamen City, Fujian, P.R. China

YEALINK (EUROPE) NETWORK TECHNOLOGY B.V.

Sir Winston Churchillin 299 k, 2288DC Rijswijk

YEALINK (USA) NETWORK TECHNOLOGY CO., LTD.

999 Peachtree Street Suite 2300, Fulton, Atlanta, GA, 30309, USA

Made in China



430104002691

YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD.

Web: www.yealink.com

Addr: No.666 Hu'an Rd,Huli District Xiamen City, Fujian, P.R.C

Copyright©2024 Yealink Inc. All right reserved.